



Lift and Tow Hydraulic Pump Parts List

ITEM	PART NUMBER	DESCRIPTION
1	LT-216	Pump Housing
2	LT-272	Pump Reservoir One Gallon Poly Tank
3	LT-268	Pump 12 V Motor DC4582
4	LT-265	Pump Reservoir Screw
5	LT-273	Pump Reservoir Cap (Sold with Plug as Set)
6	LT-267	Pump 90 Degree Fitting
7	LT-264	Pump Check Valve
8	LT-281	Solenoid for Pump 500 Amp
9	LT-271	Reservoir Tank Plug
10	LT-341	Pump Small Ground Wire to Solenoid
11	LT-342	Pump Small Power Wire to Soelnoid
12	LT-263	Hydraulic Gear Pump
13	LT-266	Hydraulic Pump Sump
14	LT-227	Pump Reservoir O-Ring
15	LT-203	KTI Hydraulic Pump
16	LT-270	Complete Pump Seal Kit

• **Complete Pump Seal Kit**