



Color is for reference to identify individual parts only.  
All fabricated parts are powder coated black.

LIFT AND TOW Z-BAR PARTS LIST		
ITEM	PART NUMBER	DESCRIPTION
1	LT-293	Z-Bar with Headplates. (No Arms, Pins, and Cylinders)
2	LT-116	Left End Arm
3	LT-117	Right End Arm
4	LT-138	Z-Bar Elbow Pin and Screw
5	LT-189	Bump Stop, Bolt, and Nut
6	LT-148	Left Middle Arm
7	LT-149	Right Middle Arm
8	LT-436	Middle Arm Washer
9	LT-139	Z-Bar Shoulder Pin and Screw
10	LT-140	Z-Bar Cylinder Pin and Screw
11	LT-410	Elbow Bronze Bushing 0.75" x 1" x 2"
12	LT-401	Z-Bar Spring
13	LT-411	Shoulder Bronze Bushing 1" x 1 1/4" x 3"
14	LT-428	Zerk (Grease) Fitting
15	LT-135	Z-Bar Main 2.5 Inch Pin
16	LT-403	Z-Bar Main 2.5 Inch Pin Nut
17	LT-447	Z-Bar Main 2.5 Inch Pin Nut Lock Screw
18	LT-446	Z-Bar Cylinder Bolt
19	LT-423	Z-Bar Cylinder Nut
20	LT-230	Z-Bar Cylinder
21	LT-234	Z-Bar Lock Block w/ Fittings
22	LT-100	Z-Bar Cylinder Seal Kit
23	LT-241	Z-Bar 16.5 Inch Hydraulic Hose
24	LT-285	Z-Bar Cylinder 90 Degree Male Fitting
25	LT-287	Z-Bar Cylinder 90 Degree Female Fitting
26	LT-237	Single Bend Metal Tubing
27	LT-242	Z-Bar Cylinder 9.5 Inch Hydraulic Hose
28	LT-238	Triple Bend Metal Tubing
29	LT-126	Z-Bar with Headplates, Arms, Pins, and Cylinders. (Complete)
30	LT-147	Z-Bar with Headplates, Arms, and Pins. (No Cylinders)
31	LT-143	Z-Bar Top Head Plate
32	LT-142	Z-Bar Bottom Head Plate
33	LT-417	Chain Hook